

Size: 19.685" x 17.5"

Please Read and Save this Use and Care Book.

IMPORTANT SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed including the following:
- Read all instructions.
 - Do not touch hot surfaces. Use handles or knobs.
 - To protect against electrical shock do not immerse cord, plugs or appliance in water or other liquid.
 - Close supervision is necessary when any appliance is used by or near children.
 - Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
 - Do not operate any appliance with a damaged cord, plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
 - The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
 - Do not use outdoors.
 - Do not let cord hang over edge of table, counter or touch hot surfaces.
 - Do not place on or near a hot gas, electric burner or in a heated oven.
 - Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
 - Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to OFF, then remove plug from wall outlet
 - Do not use appliance for other than intended use.
 - Use extreme caution when removing tray or disposing of hot grease.
 - Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
 - Oversized foods or metal utensils must not be inserted in a toaster oven, as they may create a fire or risk of electric shock.
 - A fire may occur if the toaster oven is covered or touching flammable material. These materials include curtains, draperies, walls and the like, when in operation.

- 6. For best results, on first toasting cycle set the toast selector knob to medium this will be midway between light and dark setting, then re-adjust for next cycle to lighter or darker to suit your preference.
- 7. The one indicator light comes on and remains on until toasting cycle is complete.
- 8. When toast cycle is complete, there will be an audible signal. The oven and the on indicator light will go off.
- 9. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the toast.
- 10. Unplug appliance when not in use.

BAKE FUNCTION

Note: For best results, when baking or cooking, always preheat the oven for at least 10 minutes at the desired temperature setting.

1. Set temperature control dial to the desired setting from 150 °F to 450 °F. Set cooking function selector knob to Bake.
2. Turn time selector knob to 10 and then turn back or forward to desired baking time, including preheat time. (Select STAY ON to bake longer than 30 minutes or to control cooking time yourself. Be sure to use a kitchen timer.)
3. The indicator light comes on and will remain lit during the entire baking time.
4. The heating elements will cycle on and off to maintain even heat distribution.
5. Once oven has preheated, open oven door and insert food. Close oven door.

Note: Be sure food does not extend past the outer limits of the cooking container to prevent grease dripping onto the heating elements.

- Use a metal, glass or ceramic baking dish placed on the slide rack. (Be sure food or baking dish does not come within 1½ inches of the top heating elements.
6. The first time you use the oven, follow the manufacturer's or recipe directions and check for doneness at minimum suggested cooking time. If using the oven timer, there will be an audible signal once the baking cycle is complete. The oven turns off and the light goes out.
 7. If not using the oven timer, turn the oven to OFF once cooking cycle is complete.
 8. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the cooked food.
 9. Unplug appliance when not in use.

BROIL FUNCTION

Note: When broiling, preheat oven for 10 minutes.

1. Turn the temperature selector to 450/Broil.
2. Set the timer to desired number of minutes including preheat time or to STAY ON if you want to control cooking time or need to cook your food longer than 30 minutes.
3. Place food on baking container; open oven door and insert food. Close oven door.

Note: Be sure the top edge of the food or container is at least 1½” (3.81 cm) away from the upper heating elements.

Important: Food should not extend beyond the edges of the cooking container to avoid drippings from falling onto the heating elements.

4. Cook food according to recipe or package instructions and check at minimum time to see if it is done.
5. When finished broiling, the signal bell sounds. Turn the TOAST/TIMER selector to the OFF position. The power indicator light goes off.

- To switch “OFF” the appliance turn Toast/Timer knob to "OFF" position.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote-control system.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

GROUNDING PLUG

As a safety feature, this product is equipped with a grounded plug, which will only fit into a three-prong outlet. Do not attempt to defeat this safety feature. Improper connection of the grounding conductor may result in the risk of electric shock. Consult a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

TAMPER-RESISTANT SCREW

Warning: this appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no serviceable parts inside. Repair should be done only by authorized

ELECTRICAL CORD

- a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used,
 - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
 - 2)) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.
 - 3) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel.

6. Using an oven mitt or pot holder, slide out rack together with cooking container to remove food.
7. Unplug appliance when not in use.

BROILING CHART

Cooking times are approximate and should be adjusted to individual preferences.

FOOD	APPROXIMATE TIME
Chicken pieces (1-4)	30 - 40 minutes
Hamburgers (1-3)	8 – 22 minutes
Beef steaks (1-2)	18 – 25 minutes
Fish steaks (1-6)	10 – 18 minutes

Care and Cleaning

This product contains no user serviceable parts. Refer service to qualified service personnel.

CLEANING

Important: Before cleaning any part, be sure the oven is off, unplugged, and cool.

1. Clean the glass door with a sponge, soft cloth or nylon pad and sudsy water. Do not use a spray glass cleaner.
2. To remove the slide rack, open the door, pull the rack forward and out. Wash the slide rack in sudsy water or in a dishwasher. To remove stubborn spots, use a polyester or nylon pad.
3. To open crumb tray, tip back oven, push the crumb tray knob away from you then down. Wipe with a dampened cloth or paper towel and dry thoroughly. To close, pull the crumb tray knob forward, swing the crumb tray closed, and then pull knob in to lock into place before operating the oven.


EXTERIOR SURFACES

Wipe the top and exterior walls with a damp cloth or sponge. dry thoroughly.

COOKING CONTAINERS

Metal, ovenproof glass or ceramic bakeware without glass lids can be used in your oven. Follow manufacturer’s instructions. Be sure the top edge of the container is at least 1½” (3.81 cm) away from the upper heating elements

Product may vary slightly from what is illustrated.

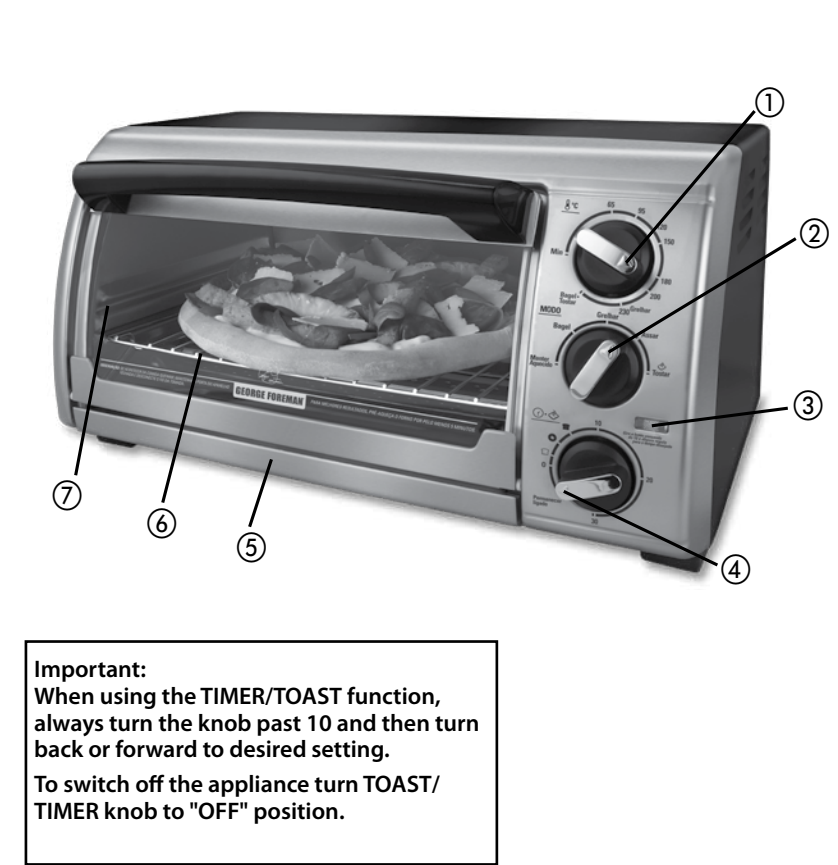

Important:
When using the TIMER/TOAST function, always turn the knob past 10 and then turn back or forward to desired setting.
To switch off the appliance turn TOAST/ TIMER knob to "OFF" position.

1. Temperature selector knob
2. Cooking function selector knob
3. Power indicator light
4. TIMER/TOAST selector knob with stay on setting
5. Removable crumb tray
6. Slide rack
7. Rack slots

TERMO DE GARANTIA LIMITADA

Garantia: este produto, devidamente lacrado, é garantido pela Salton Brasil contra defeitos de material e mão-de-obra, pelo prazo total de um (1) ano a partir da data de Nota Fiscal de venda ao consumidor.

Abrangência: A garantia do produto fica automaitcamente inválida se o produto for danificado em consequência de acidentes de transporte ou manuseio, uso inapropriado, descuido, negligência, serviços não autorizados, uso comercial, reparos providos por pessoas ou entidades não credenciadas, desgaste normal, adição de peças ou acessórios que não sejam de fábrica, danos de instalação ou outras causas que não as constatadas como sendo de fabricação. A presente garantia é aplicável somente para produtos adquiridos e utilizados no Brasil e não se estende a produtos que não tenham sido operados de acordo com as instruções de uso e operação específicasas no respectivo Manual do Proprietário fornecido pela Salton Brasil ou que tenham sido modificados ou peças danificadas que tenham tido o número de série removido, modificado, adulterado ou tornado ilegível.

Grantias Implícitas: Esta garantia substitui todas as outras garantias expressas ou implícitas e nenhum representante ou terceiro está autorizado a assumir qualquer outra obrigação relacionada à venda de nossos produtos em nome da Salton Brasil.

Execução da Garantia: Durante o prazo de vigência da garantia, o produto defeituoso será reparado ou substituído por um modelo similar equivalente a novo (a critério exclusivo da Salton Brasil) quando for encaminhado à Assistência Técnica autorizada da Salton Brasil ou o valor referente ao preço de compra será devolvido. O produto reparado ou substituído terá garantia pelo prazo remanescente da garantia original do produto e mais um (1) mês adicional. Nenhuma taxa será cobrada pelo reparo ou substituição.


Nas localidades onde não exita Assistência Técnica autorizada pelo Salton Brasil, as despesas de transporte do produto correm por conta do consumidor.

Itens Excluidos desta Garantia: Esta garantia substitui todas as outras garantias expressas ou implícitas e nenhum representante ou terceiro está autorizado a assumir qualquer outra obrigação relacionada à venda de nossos produtos em nome de Salton Brasil. Sob hipótese alguma a Salton Brasil será responsável por defeitos, mau funcionamento ou deficiência do produto, seja baseado em lei contratual, comercial ou qualquer outra teoria legal, incluindo, sem limitação, negligência, obrigação expressa, quebra da garantia e não cumprimento de cláusula contratual. A Salton Brasil não se responsabilizará por quaisquer danos diretos, indiretos, ou resultantes de uso ou desempenho do produto, ou outros prejuízos relativos a danos de propriedade, ou prejuízos pecuniários.

Assistência Técnica: Em caso de mau funcionamento entre em contato com o Serviço de Atendimento ao Consumidor Salton no número mencionado abaixo.

How to Use

This product is for household use only.

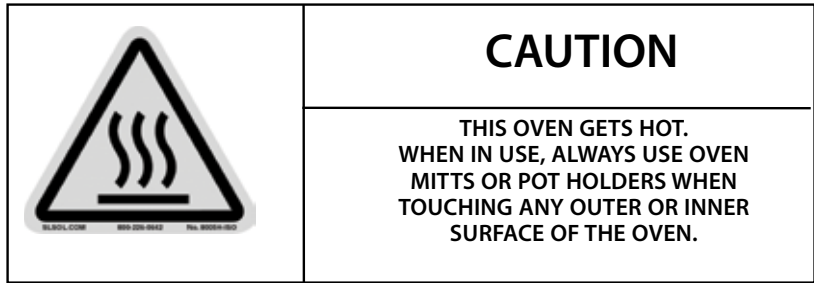

Caution: Do not leave oven unattended when in operation. Food ignition may occur. If this happens, unplug unit but DO NOT open door. To reduce the risk of fire, keep oven interior completely clean and free of food residues, oil, grease and any other combustible materials.

Caution: A fire may occur if the toaster oven is covered or touching flammable materials including curtains, draperies, walls and the like when in operation or after, when still hot. Do not place any of the following materials in the oven, on top of the oven or in contact with the oven sides or bottom surfaces: paper, cardboard, plastic or the like.

GETTING STARTED

- Remove all packing material and any stickers.
- Wash all removable parts as instructed in CARE AND CLEANING.
- Select a location where this unit is to be used, allowing enough space from back of the unit and the wall to allow heat to flow without damage to cabinets and walls.
- Plug unit into electrical outlet.

IMPORTANT INFORMATION ABOUT YOUR OVEN

- This oven gets hot. When in use, always use oven mitts or potholders when touching any outer or inner surface of the oven.
- During first few minutes of use you may notice smoke and a slight odor. This is normal and should cause no concern.
- You must set the timer or select STAY ON for the oven to function.

TOAST FUNCTION

It is not necessary to preheat the oven for toasting.

1. Set temperature selector knob to Bagel/Toast position and the function selector knob to Toast or Bagel.
2. Open oven door.
3. Insert slide rack.
4. Place desired pieces of bread or bagel to be toasted directly on slide rack and close the door.
5. Turn toast shade selector knob to 10 and then turn back to desired toast shade
Note: : You must set the toast shade selector knob as desired for the oven to begin Toasting

Suporte e Serviço
George Foreman é uma marca da Spectrum Brands Corporation.
Para mais informações sobre os produtos de Spectrum Brands Corporation visite nosso site:
www.georgeforeman.com.br
Best Way Distribuidora de Bens de Consumo Ltda.
Todos os direitos reservados.
SAC: 0800 701 7989

Código da data/Date Code

Modelo/Model: GFTRO480BS127V
Voltagem/Voltage: 127V
Modelo/Model: GFTRO480BS220V
Voltagem/Voltage: 220V